

Quick Start Guide

32-Port 800G Ethernet Switch
AS9817-32D

Accton

www.accton.com

Package Contents



1



2



3



4



5




6



7

- 32-Port 800G Ethernet Switch AS9817-32D
- Slide-rail mounting kit—2 rack slide-rails and install guide
- AC power cord (included with AC PSUs only)
- DC power cord (included with DC PSUs only)
- Ground plate
- Ground lug (optional)
- Documentation—Quick Start Guide (this document) and Safety and Regulatory Information

Overview




- 32 x 800G QSFP-DD800 ports
- Management Ports: 2 x 25G SFP28, 1 x 1000BASE-T RJ-45, RJ-45 console, USB
- System LEDs




- 2 x AC or DC PSUs
- 7 x fan trays

System LEDs/Buttons

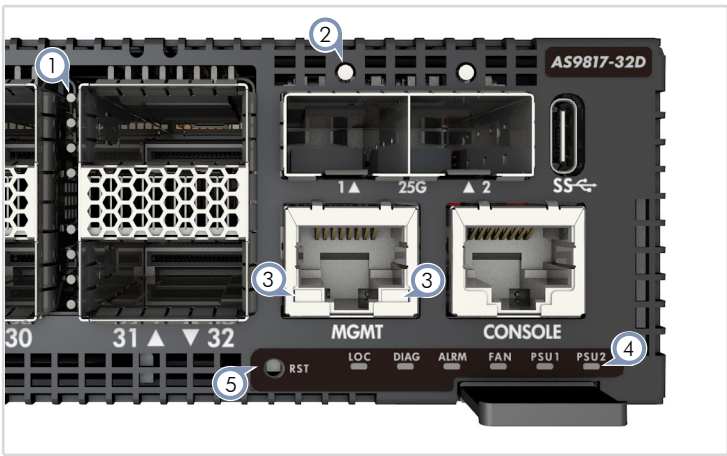


- QSFP-DD800 LEDs:** Yellow (800G), Blue (400G), White (200G), Green (100G)
- SFP28 LEDs:** Green (link/activity)
- RJ-45 MGMT LEDs:** Left: Green (link/act), Right: Green (1 G/100M)
- System LEDs:**
LOC: Flashing Green (switch locator)
DIAG: Green (OK), Red (fault)
ALRM: Red (fault)
FAN: Green (OK), Red (fault)
PSU1/PSU2: Green (OK), Red (fault)
- RST:** Reset button

FRU Replacement

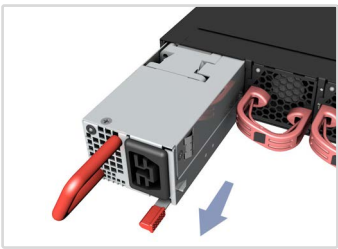

PSU Replacement

- Remove the power cord.
- Press the release latch and remove the PSU.
- Install replacement PSU with matching airflow direction.

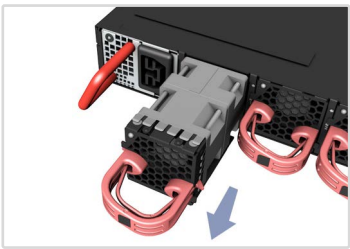

Fan Tray Replacement


- Pull the handle release latch.
- Remove the fan tray from the chassis.
- Install a replacement fan with matching airflow direction.



Caution: During switch operation, fan replacement should be completed within two minutes to prevent the switch shutting down due to its built-in over-temperature protection.
Attention: Pendant le fonctionnement du commutateur, le remplacement du ventilateur doit être effectué dans les deux minutes pour éviter que le commutateur ne s'arrête en raison de sa protection intégrée contre la surchauffe.




Airflow Reversal

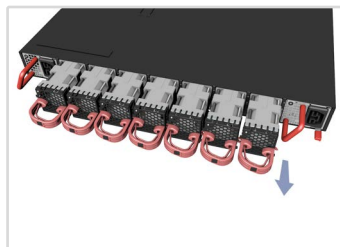

1. F2B Airflow

Remove front-to-back (F2B) airflow fan trays (red handles) and PSUs (red handles).

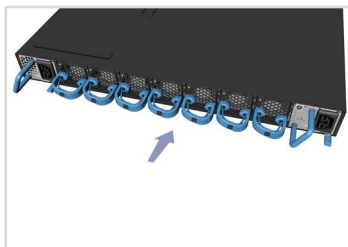

2. B2F Airflow

Install back-to-front (B2F) airflow fan trays (blue handles) and PSUs (blue handles).

Installation



Warning: For a safe and reliable installation, use only the accessories and screws provided with the device. Use of other accessories and screws could result in damage to the unit. Any damages incurred by using unapproved accessories are not covered by the warranty.

Avertissement: Pour une installation sûre et fiable, utilisez uniquement les accessoires et les vis fournies avec l'appareil. L'utilisation d'autres accessoires et vis pourrait endommager l'appareil. Les dommages causés par l'utilisation d'accessoires non approuvés ne sont pas couverts par la garantie.



Caution: The device must be installed in a restricted-access location.

Attention: L'appareil doit être installé dans un emplacement à accès restreint.



Note: The device has the Open Network Install Environment (ONIE) software installer preloaded, but no device software image.

Note: The drawings in this document are for illustration only and may not match your particular model.




Note: Stability hazard. The rack may tip over causing serious personal injury.

Before extending the rack to the installation position, read the installation instructions.

Do not put any load on the slide-rail mounted equipment in the installation position.

Do not leave the slide-rail mounted equipment in the installation position.

2 Ground the Device

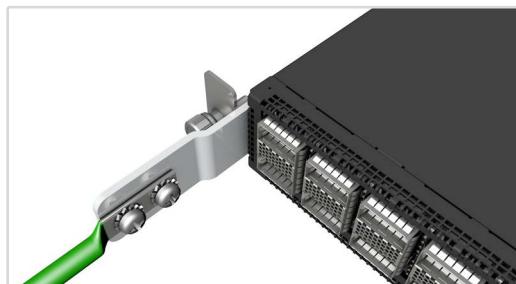

Verify Rack Ground

Ensure the rack on which the device is to be mounted is properly grounded and in compliance with ETSI ETS 300 253. Verify that there is a good electrical connection to the grounding point on the rack (no paint or isolating surface treatment).

Attach Grounding Wire

Use two M5 screws to attach the ground plate to the side of the device. Attach a grounding wire with a grounding lug (Panduit LCCF6-14A-L or equivalent, not included) to the ground plate using two M6 screws and washers. The grounding lug should accommodate #6 AWG stranded copper wire (green with yellow stripe, not included).



Caution: The earth connection must not be removed unless all supply connections have been disconnected.

Attention: Le raccordement à la terre ne doit pas être retiré sauf si toutes les connexions d'alimentation ont été débranchées.

1 Mount the Device



Caution: This device must be installed in a telecommunications room or a server room where only qualified personnel have access.


Attention: Cet appareil doit être installé dans une salle de télécommunications ou une salle de serveurs où seul le personnel qualifié a accès.



Using the Slide-Rail Kit

Follow instructions in the install guide provided in the slide-rail kit to mount the device in a rack.


3 Connect Power

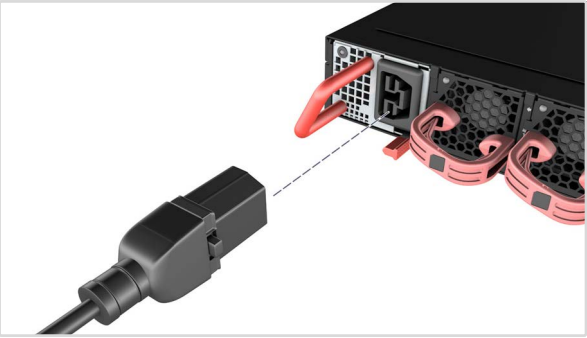


Install one or two AC or DC PSUs and connect them to an AC or DC power source.

Caution: When using the included AC power cord, the AC power supply must be installed within 1 meter of the wall or rack-mounted AC outlet.
Attention: Lorsque vous utilisez le câble d'alimentation secteur fourni, l'alimentation doit être installée à moins d'un mètre de la prise murale ou de la prise montée en rack.

Note: When using only one AC PSU to power a fully loaded system, be sure to use a high-voltage source (200–240 VAC).

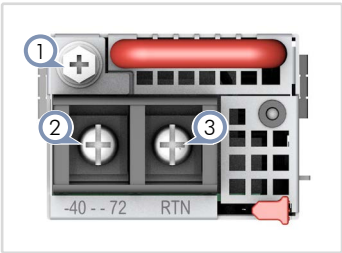

- 1. Ground
- 2. -40 – -72 VDC
- 3. DC return

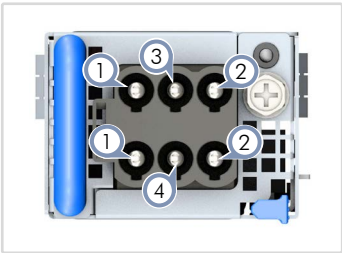


- 1. -40 – -72 VDC
- 2. DC return
- 3. Signal +
- 4. Signal –

Caution: Use a UL/IEC/EN 60950-1 and/or 62368-1 certified power supply to connect to a DC converter.
Attention: Utilisez une alimentation certifiée UL/IEC/EN 60950-1 et/ou 62368-1 pour le connecter à un convertisseur CC.
Caution: All DC power connections should be performed by a qualified professional.
Attention: Toutes les connexions d'alimentation CC doivent être effectuées par un professionnel qualifié.

Note: Connect an external DC power source to the PSUs. Or, connect to a no-tolerance DC mains supply with a UL/CSA-approved circuit breaker rated for 80A or as required by local electrical code.


Note: Use #6 AWG / 13.3 mm² 90°C-rated copper wire (for a -40 to -72 VDC PSU) to connect to a DC PSU. Tighten the screws to a torque of 2.4 N.m (21.2 lbf.in).

4 Make Network Connections

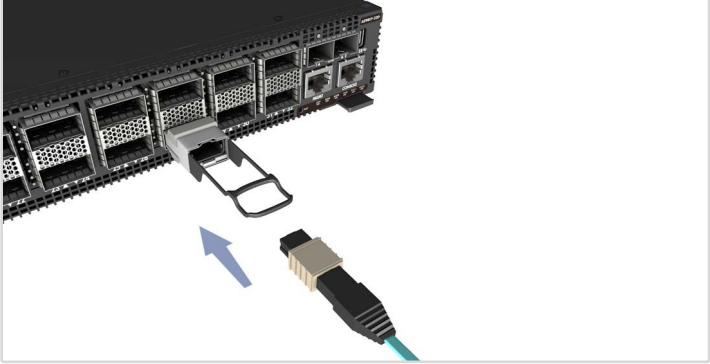

800G QSFP-DD800 Ports
Install transceivers and then connect fiber optic cabling to the transceiver ports.
Alternatively, connect DAC or AOC cables directly to the slots.

5 Make Management Connections

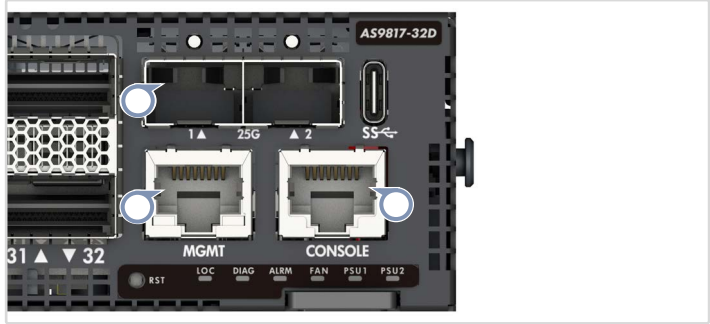

25G SFP28 In-Band Management Ports
Install transceivers and then connect fiber optic cabling to the transceiver ports.

10/100/1000M RJ-45 Out-of-Band Management Port
Connect Cat. 5e or better twisted-pair cable.

RJ-45 Console Port
Use an RJ-45-to-DB-9 null-modem console cable (not included) to connect to a PC running terminal emulator software. Use a USB-to-male DB-9 adapter cable (not included) for connections to PCs that do not have a DB-9 serial port.

Configure the serial connection: 115200 bps, 8 characters, no parity, one stop bit, 8 data bits, and no flow control.

Console cable pinouts and wiring:

Device's RJ-45 Console	Null Modem	PC's 9-Pin DTE Port
6 RXD (receive data)	<-----	3 TXD (transmit data)
3 TXD (transmit data)	----->	2 RXD (receive data)
4,5 SGND (signal ground)	-----	5 SGND (signal ground)

Hardware Specifications

Switch Chassis

Size (WxDxH)	438.4 x 589 x 44 mm (17.26 x 23.19 x 1.73 in.)
Weight	14.69 kg (32.39 lb), with 2 PSUs and 7 fans installed
Temperature	Operating: 0° C to 40° C (32° F to 104° F) Storage: -40° C to 70° C (-40° F to 158° F)
Humidity	Operating: 5% to 95% (non-condensing)

System Input Rating

AC Input	200-240 VAC, 50/60Hz, 15 A max. per PS
DC Input	-48 – -60 VDC, 53 A max. per PS

Regulatory Compliances

Emissions	EN 55032 Class A EN 300 386 Class A EN 61000-3-2 Class A EN 61000-3-3 VCCI Class A AS/NZS Class A ICES-003 Class A FCC Class A BSMI Class A
Immunity	EN 55024/55035 EN 300 386 EN/IEC 61000-4-2/3/4/5/6/8/11
Safety	UL (CSA 22.2 No 62368-1 & UL62368-1) CB (IEC/EN 62368-1)
